

3D BRACELET JIG TEMPLATE


Geometric Cuff Bracelet

Materials: 28 inches of 14Ga Artistic Wire

Set 44 pins into the 3D Bracelet Jig as shown following the guide. Begin by placing the center of the wire across pegs D6 and F6. Work your way down one side, then the other to make the geometric pattern. Trim the wires at the end as shown. Remove pins to remove bracelet. Use a 14Ga Artistic Wire Crimp Tube to make the connection with the two free ends. Bend the Cuff Bracelet into the appropriate shape for placing on a wrist.



Tip: Once the first wire is completely formed onto the Jig, take a second wire and wrap over the first in the same pattern to get a second bracelet. Remove pins to remove both bracelets.

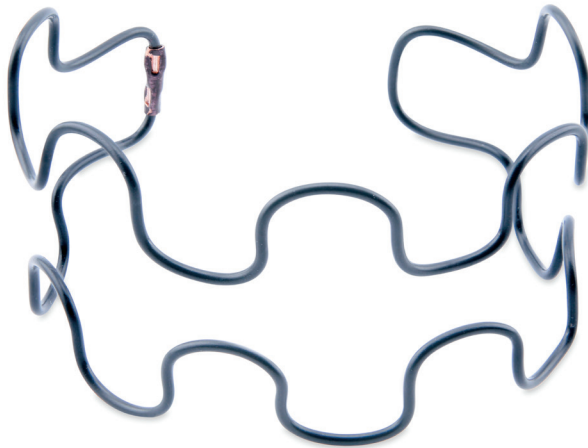

Adding Beads: Once the bracelet form has been finished, use Artistic Wire to wrap beads onto the wire form. These beads can be added symmetrically or asymmetrically over and around this Cuff Bracelet.



Copyright free Designs by Wyatt White

