


Beadalon®

HOW TO: MAKE A KNOTTED HEADPIN WITH 22-26 GAUGE WIRE


By: Meredith Roddy




1. Cut a 3 inch length of 22-24 Gauge Wire. Place the Wire in the tips of a Round Nose Pliers.

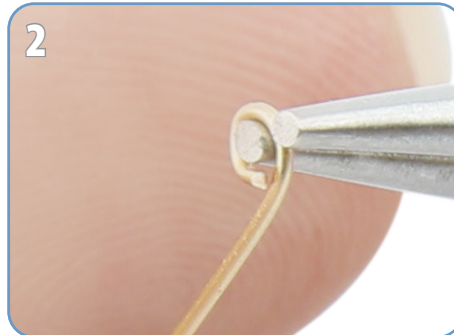


2. Turn a loop on the end of the Pliers.

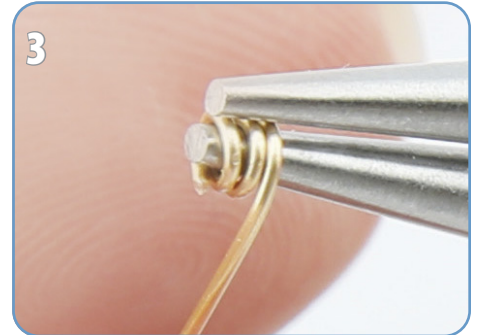


3. Continue turning a coil of three revolutions.

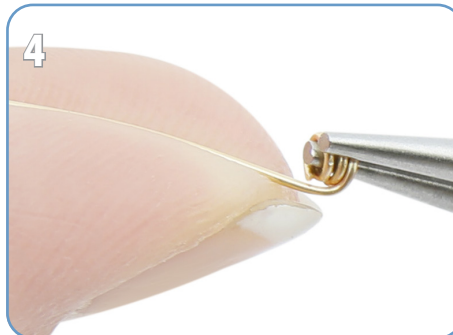

4. Use your thumb to bend the wire back along the coil.

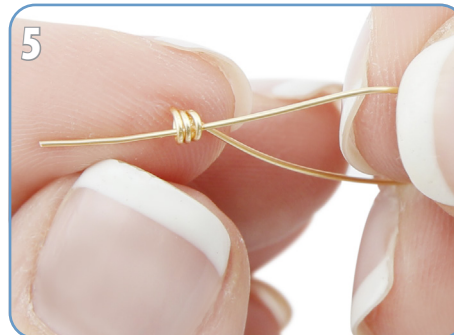


5. Turn the Wire so that the coil is on the left, and the free side is on the right. Thread the end of the Wire back through the coil.

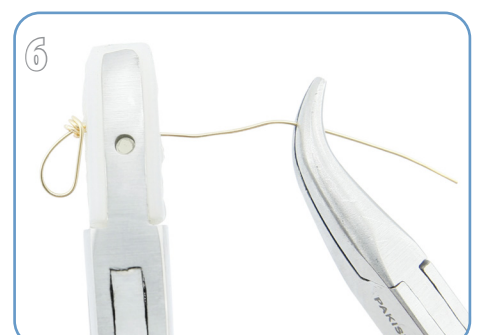


6. Place a Nylon Jaw Pliers against the coil and hold the end of the Wire with Chain Nose Pliers.



7. Slowly pull the Wire to the right while holding the Nylon Jaw Pliers firmly against the coil.

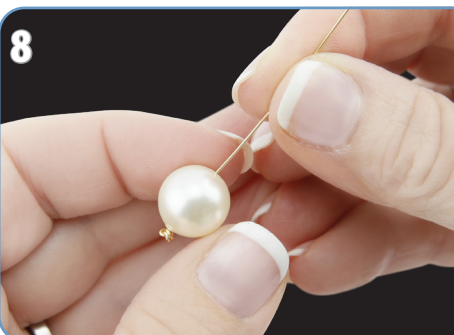

8. Place a bead on the Wire.

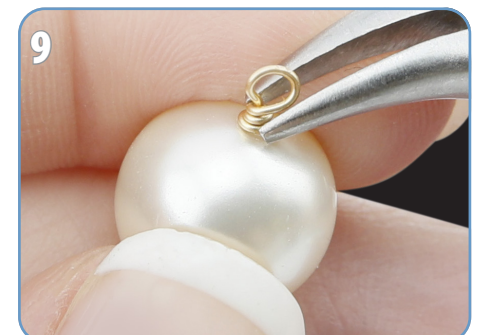

9. Make a wrapped loop on the top of the Bead.