

DESIGN WORKSHOP

MAGMA HEART NECKLACE

By: Sara Ellis



Materials

- Beadalon 19 Strand Stringing Wire in Bright – JW14T-0 (1 20 inch strand, 2 12 inch strands, 2 6 inch strands)
- 238 4mm Maroon Glass Pearls
- 6 3mm Bicones
- 1 4mm Bicone
- 10 Beadalon #1 Silver Crimp Beads - JFC1S- 25Z
- 10 Beadalon 4mm Silver Crimp Covers – 349B-010
- 4 Beadalon Silver Tone 15 Hole Spacer Bars – JSKIT0295
- 2 Beadalon Silver 4mm Jump Rings – 314B-003
- 1 Beadalon Silver Head Pin – 312B-013
- 2 3mm Silver Beads
- 1 12mm Red Magma Swarovski Crystal Heart Bead
- 1 Beadalon Medium Silver EZ-Lobster Clasp – 315B-221
-
-
- Tools:
- Beadalon Designer Sparkle Chain Nose Pliers – 201A-101
- Beadalon Designer Sparkle Cutter – 202A-105
- Beadalon Mighty Crimper Tool – JTCRIMP3
- Beadalon Designer Sparkle Round Nose Pliers – 201A-104

1. Prepare your Magma Crystal Heart Bead. Thread the heart bead and 4mm bicone onto the head pin.

2. Using your chain nose pliers, bend the head pin 90 degrees and snip the end with your cutter tool, leaving approximately ½ inch of the pin.

3. Using your round nose pliers, grasp the end of the pin and roll into a loop. Set your finished bead aside.

4. Prepare your EZ-Lobster Clasp. Using your chain nose pliers, close the clasp over a 4mm jump ring and set aside.

5. Loop your 20 inch strand of stringing wire around 1 jump ring, threading both ends through a #1 crimp bead.

6. Using your chain nose pliers, gently close the crimp bead over the wires, making sure the wires sit side-by-side within the crimp bead.

7. Using your Mighty Crimp tool, close a crimp cover over the crimp bead. Because the crimp cover is significantly larger than the crimp bead, no further crimping is needed.



8. String glass pearls and 3mm bicones in the following pattern – 16 pearls, 1 crystal, 10 pearls, 1 crystal, 10 pearls, 1 crystal, 10 pearls.

9. String on 1 3mm silver bead.

10. Thread the end of your wire through the top hole of 1 15 hole spacer bar.



11. Thread three glass pearls.
12. Thread the end of your wire through the top hole of another 15 hole spacer bar.
13. Thread three glass pearls.
14. Thread the end of your wire through the top hole of another 15 hole spacer bar.
15. Thread three glass pearls.
16. Thread the end of your wire through the top hole of one more 15 hole spacer bars. You have now threaded a total of 4 spacer bars.
17. String 1 3mm silver bead.
18. String glass pearls and 3mm bicones in the following pattern – 10 pearls, 1 crystal, 10 pearls, 1 crystal, 10 pearls, 1 crystal, 16 pearls.
19. Loop the end of your wire through the jump ring/EZ-Lobster Clasp combo and thread the ends through a #1 crimp bead.
20. Pull the wire so that the crimp bead sits as close to the glass pearls as possible, leaving enough room for a crimp cover.
21. Using your chain nose pliers, gently close the crimp bead over the wires, making sure that the wires sit side-by-side within the crimp bead.
22. Using the Mighty Crimp Tool, close a crimp cover over the crimp bead.
23. Crimp a #1 crimp bead on the end of one of your 6 inch strands of stringing wire, leaving a 1 inch tail.
24. Starting at the top of the first 15 hole spacer bar you've used, count down three holes and thread your wire through the hole.
25. Thread on 4 glass pearls.
26. Thread your wire through the third hole of the next spacer bar.
27. Thread on 2 glass pearls, your prepared Magma heart bead and 2 glass pearls.
28. Thread your wire through the third hole of the next spacer bar.
29. Thread on 4 glass pearls.
30. Thread on 1 #1 crimp bead.
31. Slide the crimp bead as close to the edge of the spacer bar as possible, leaving enough room for a crimp cover.
32. Using your chain nose pliers, gently squeeze the crimp bead closed over the single strand of wire.
33. Using the Might Crimp tool, close a crimp cover over the crimp bead. The crimp bead inside acts as a "stopper" to hold your wire in place through the spacer bars.
34. Using your Cutter tool, snip the tail of the wire exiting the crimp cover so that it is flush with the crimp cover hole.
35. Repeat the same process on the other side. Close a crimp cover over the crimp bead and snip the end of the wire.
36. So far, your necklace should look like image 36.

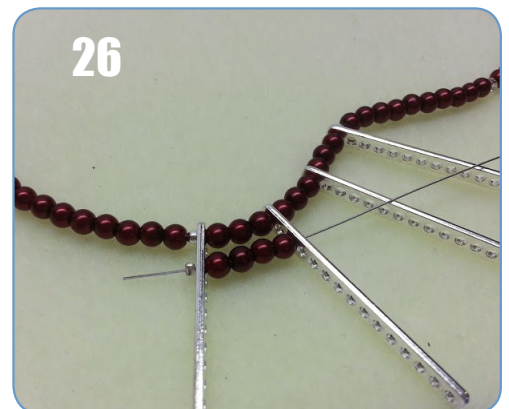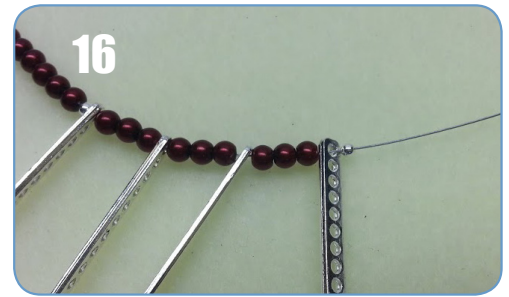

37. Loop 1 12 inch strand of stringing wire through the jump ring end of your necklace where you began, through a #1 crimp bead. You will have two strands on the same jump ring.

38. Using your chain nose pliers, gently squeeze the crimp bead closed over the wires so that the wires sit side-by-side within the crimp bead.

39. Using your cutter tool, snip the tail of the wire as close to the crimp bead as possible.

40. Using your Mighty Crimp tool, close a crimp cover over the crimp bead.

41. Thread on 46 glass pearls.

42. Thread the end of the wire through the first 15 hole spacer bar in the eighth hole on the spacer bar (counting from the top).

43. Slide a #1 crimp bead onto the wire. Slide the crimp bead as close to the 15 hole spacer bar as possible, leaving enough room for a crimp cover and squeeze closed with your chain nose pliers.

44. Using the Mighty Crimp tool, close a crimp cover over the crimp bead.

45. Snip the wire exiting the crimp cover with your Cutter tool so that the wire is flush with the hole of the crimp cover.

46. Repeat steps 37-45 on the other side of your necklace, starting on the jump ring/EZ-Lobster Clasp side.

47. Your necklace should look like image 47.

48. Thread a #1 crimp bead onto a strand of 6 inch stringing wire and squeeze closed, leaving a 1 inch tail.

49. Thread the wire through the second to last hole in the first 15 hole spacer bar.

50. Thread on 9 glass pearls.

51. Thread the wire through the second to last hole on the next 15 hole spacer bar.

52. Thread on 9 glass pearls.

53. Thread the wire through the second to last hole on the next 15 hole spacer bar.

54. Thread on 9 glass pearls.

55. Thread the wire through the second to last hole on the last 15 hole spacer bar.

56. Slide on a #1 Crimp bead down as close to the 15 hole spacer bar as possible, leaving enough room for a crimp cover and squeeze closed.

57. Using the Mighty Crimp tool, close a crimp cover over the crimp bead.

58. Snip the exiting wire with the Cutter tool so that it is flush with the hole of the crimp cover.

59. Repeat the steps 57 and 58 on the other side.

60. Your necklace is finished!

